




## Parts supplied:

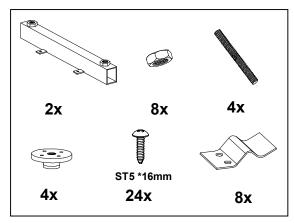



## **NOTES**


- Prior to installation check that all parts have been supplied.
- Assemble bath on a mat to protect against damage to bath surface.
- This product requires a two person lift use proper lifting techniques.
- This installation guide does includes recommendation of waste connection; final decision about installation and waste connection should be taken by a suitably qualified person.
- Follow each step in turn.

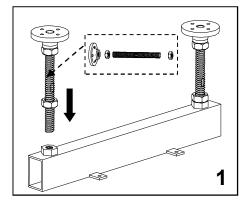

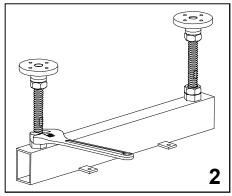

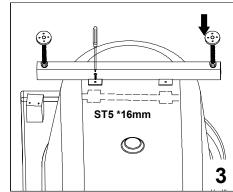

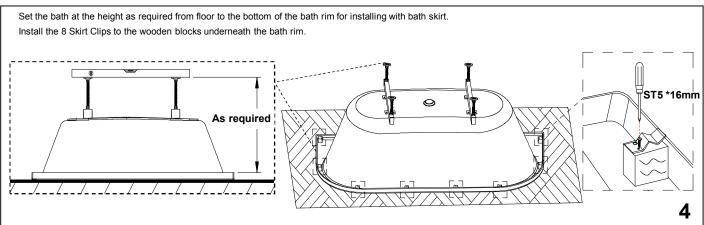

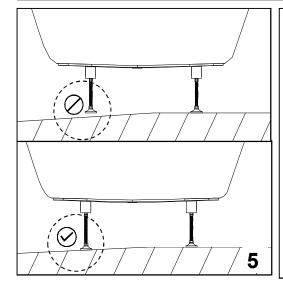


The overflow, waste, taps have been fitted by a suitably qualified person before pushing into the bath skirt.

It is essential that once the bath is in its final position the bath legs be firmly fixed to and secured to the floor using fixings appropriate for the type of floor surface ( such fixing not included ).

To hold the ends of the bath surround securely, and support the corners of the bath, we recommend that wall battens are fitted as shown.

that wall battens are fitted as shown.

Baths can flex when filled with water, so the battens should not be attached to the bath. Use a fixing method like Velcro to hold the bath panel to the battens.

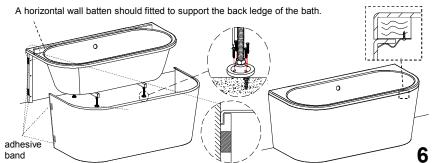

1 - 1

В