
# **Mirror Cabinet Installation Instructions**

## **Getting Started**

**All goods must be checked prior to installation.** If defects are found due to manufacturing faults then goods MUST NOT be installed. The retail merchant must inform the manufacturer.

The manufacturer will not be liable for any installation, removal or re-decorating costs. The warranty will be null and void if damage occurs during or after installation. If there is a proven manufacturing defect i.e. outside of tolerance and the installation is carried out then, the manufacturer will replace the item. However, the installation costs will be the responsibility of the installer.

### **Tools Required**

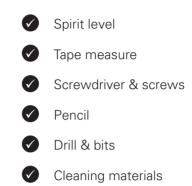

#### **Mirror Cabinet Installation**

**PLEASE READ CAREFULLY** – It is recommended that a qualified, licensed trades person installs your unit. **Ensure instructions are passed to homeowner.** 

- 1. **Check the wall is straight** (not bowed or twisted). Ensure unit is square against the wall before securing. Door alignment could be affected otherwise.
- Decide appropriate height for unit. Tiles etc surrounding the installation must provide adequate space for future removal of product if required. The cabinet must be clear of a bathroom top by at least 3mm. We recommend tiling behind furniture.
- 3. Any wall to which product is fixed must be of suitable construction to support that products weight. Make sure your fixings will be into studs or dwangs on each side of the cabinet, top and bottom. If it is not possible then use the appropriate rawl plugs or GIB fixing screws to suit your wall material.
- 4. **Securely fasten unit to wall through the back**, no further than 100mm from end of cabinet. Upper fixings no lower than 50mm.



**BATHCO.CO.NZ** info@smail.co.nz November 2018 CHRISTCHURCH 86 Wigram Road, Wigram +64 3 343 0969 AUCKLAND 4-8 Ace Place, Kingsland +64 9 309 9109

#### **Hinge Adjustment**

It is the responsibility of the licensed installer to make any adjustments to align doors after installation if required.

**Note:** All fittings have been factory set and should not need adjustment. Check that the unit has not been twisted during installation before making adjustments.



Depth Adjustment



Height Adjustment



Side Adjustment

#### **Cleaning & Maintenance**

#### Remove all moisture caused by wet hands, steam or splashes with a chamois or soft cloth after use.

To maintain the finish on your unit, only use a soft cloth, or a weak solution of non-abrasive detergent. Do not use cleaners that incorporate isopropyl alcohol, or products with high alkaline/ph levels. Contact Bath Co directly to provide guidelines to polish scratched and heavy stains.

To restore accidental scratches, burns etc on gloss painted finishes, rub gently with a very light cutting compound. On matt or timber finishes contact the manufacturer.

Mirror should be cleaned with diluted methylated spirits only (dilute 1:10). Remove all moisture caused by splashes, wet hands, or steam with a chamois or soft cloth after use. Do not wipe the exposed edge of the mirror. To avoid deterioration; it is important mirrors are kept dry of any moisture.



**BATHCO.CO.NZ** info@smail.co.nz November 2018 CHRISTCHURCH 86 Wigram Road, Wigram +64 3 343 0969 AUCKLAND 4-8 Ace Place, Kingsland +64 9 309 9109