
BATH/
CO/

Acrylic Shower & Shower Bath Liners

Installation Instructions

Before you start

- Check that your wall liner is undamaged before installation.
- Confirm the shower tray has been installed level and in accordance with the tray installation instructions.
- The liner is designed for use on straight, true walls lined with 10mm moisture-resistant wallboard (e.g. standard plasterboard, aquapanel or similar). The wallboard must be fully secured and sealed (not loose, sanded, painted or stopped) – the liner adhesive will not bond to these surfaces.
- Do not remove the protective film from the wall liner until the installation is complete.
- Use only the recommended adhesive and silicone sealant.
- Ensure plumbing outlets do not obstruct the door when opened.

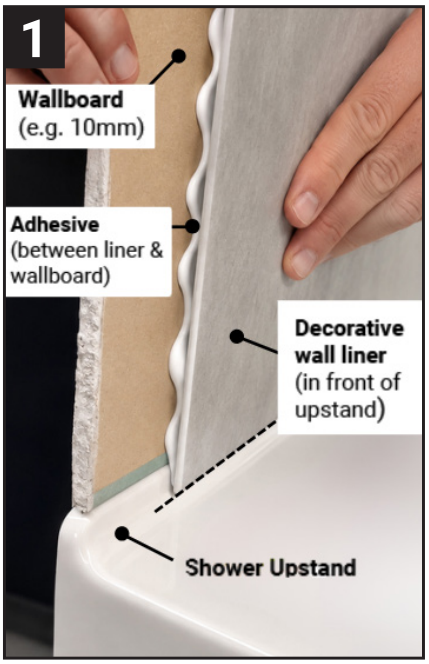

1 Fit the liner and upstand

Position the wall liner in the rear corner of the shower tray to check that it fits correctly. Ensure the liner does not extend beyond the front edge of the tray, as this could interfere with the installation of the shower door.

For shower trays with upstands on all four sides, the bottom corners of the liner may need to be notched to achieve a proper fit.

Check that the shower tray is level and the walls are plumb. The liner should sit firmly against the tray surface. If it does not sit evenly, carefully mark and trim the liner using a hand plane or sandpaper.

Important: Trimming the wall liner will reduce its overall height. Measure carefully and remove only the minimum amount of material required to achieve a correct fit.







2 Prepare tapware openings

Measure and cut out the openings for your tapware (refer to the cutting and drilling guidance on the next page).

3 Mark the wall

Using a pencil, mark the perimeter of the liner on the wall. Keep the mark slightly inside the liner edge so it is not visible after installation.


4 Clean the surfaces

Ensure the wallboard and rear of the liner are clean, dry and free from dust or other contaminants. To reduce static, wipe the rear of the liner with a damp cloth.

5 Apply silicone to the tray upstand

Apply a continuous 10mm bead of neutral-cure silicone sealant along the inside edge of the tray upstand. Also apply sealant to the top half of the upstand to eliminate it squeezing out under the liner when fitted.

BATH/
CO/

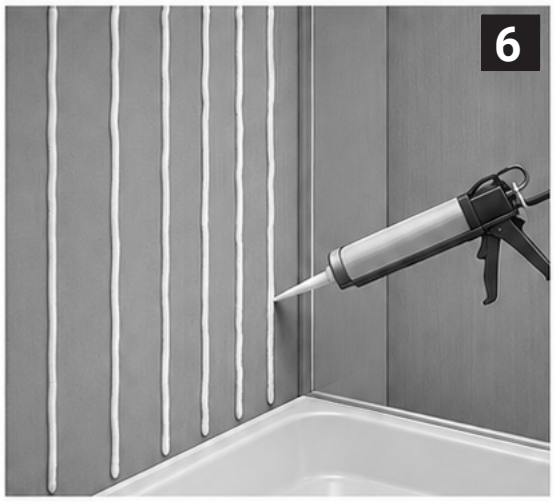

















Acrylic Shower & Shower Bath Liners

Installation continued

6 Apply the recommended shower bond adhesive. Use 5–6mm continuous beads in vertical lines at approximately 100mm spacing, keeping 20mm in from the marked outline of the wall liner.

Position the wall liner and press firmly onto the adhesive across the entire surface.

The installation of the liner must be completed within 15 minutes to avoid premature curing of the adhesive.

7 Remove any excess sealant or adhesive that may have oozed out.

8 Seal the top edge of the wall liner with a suitable sealant. Use a paintable sealant if the surrounding surface is to be painted. Masking the area will help achieve a neat finish.

The installation of the enclosure may begin immediately or as required.

Cutting and drilling

- Use a hacksaw or jigsaw with a minimum of 18 teeth per inch.
- Holes up to 12mm in diameter can be drilled with a standard twist drill with a reduced cutting angle.
- Holes larger than 12mm in diameter can be cut using a hole saw.
- Edges can be finished with medium grit sandpaper or planed with a hand plane.

MICHEL CÉSAR VCBC BURLINGTON

/ WHERE BATHROOMS & LAUNDRIES COME TOGETHER

info@bathco.co.nz

4-8 Ace Place
Kingsland
Auckland 1021
New Zealand

P +64 9 309 9109

92 Wigram Road
P.O. Box 8644
Christchurch 8025
New Zealand

P +64 3 343 0969

BATH/
CO/

November 2026