
Hinged Bath Screen

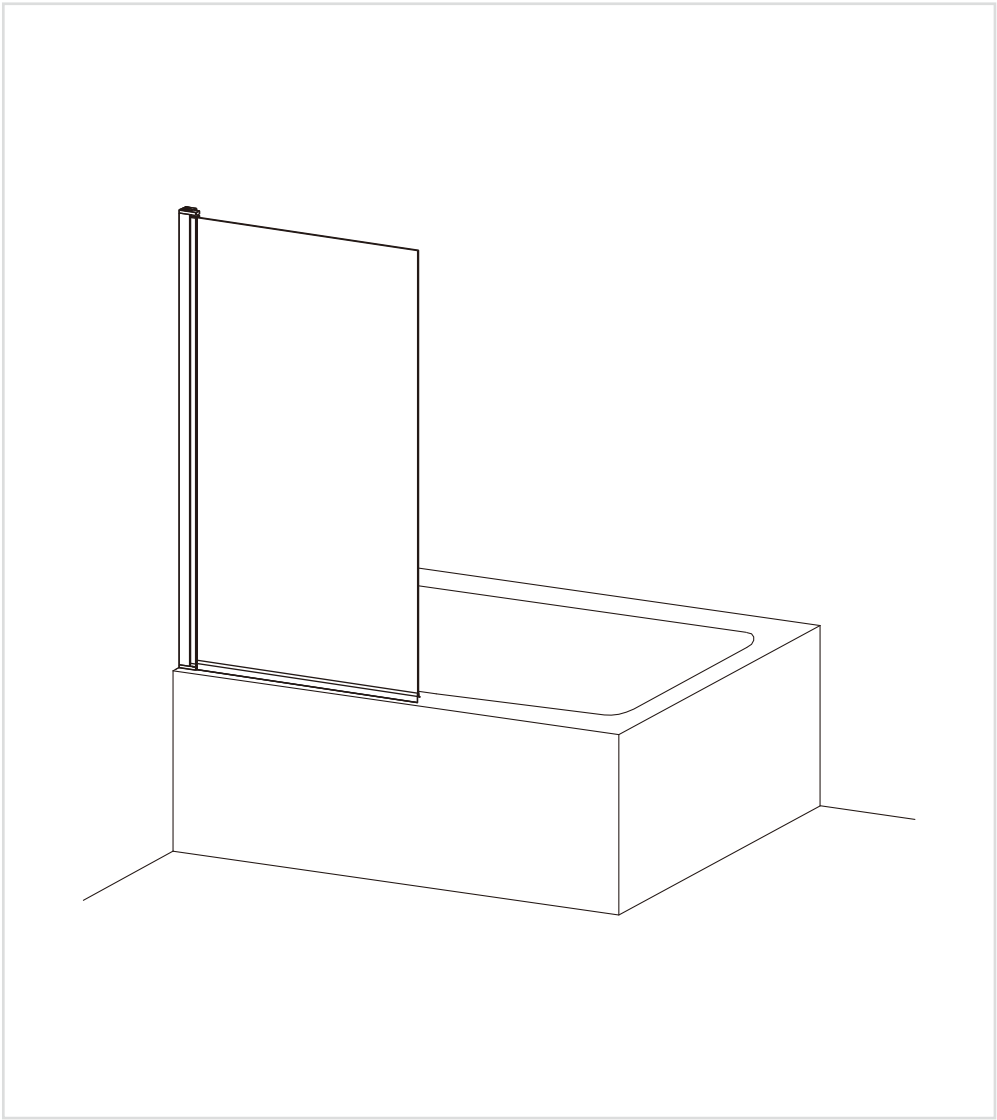

PRODUCT CODES:

CABSSC0800_V2
CABSBC0800_V2
CABSFC0800
CABSVC0800
CABSBZC0800
CABSTC0800
HXBSSC0800
HXBSBC0800
HXBSFC0800

1. Pre-Installation Checklist

☑ Before You Begin:

- Ensure all tiling/grouting is complete.
- Bathtub **must be level and sealed** to tiles.
- Verify door dimensions match your space (see Section 3).
- Check for hidden pipes/cables before drilling.

⚠ Safety Notes:

- The product should only be installed by a suitably qualified plumber/installer.
- **Two people required** for installation (glass is heavy!).
- Wear gloves when handling glass edges.

2. Unpacking & Components

Confirm all parts are present:

- Please refer to all components included on following page titled “COMPONENTS”

Missing/Damaged Parts?

Contact Bathroom Brands immediately: 0345 873 8840.

3. Step-by-Step Installation

A. Frame Assembly

1) Mark Drill Points:

- Use a spirit level to mark vertical lines for wall profiles.
- Drill 6mm holes at marked points; insert wall plugs.

2) Attach Wall Profiles:

- Secure profiles with ST4x50mm screws (×4 total).
- Cover ends with profile caps if any.

B. Door Installation

3) Hang the Door:

- Following the instruction to assemble the door, ensure door is fully secured.
- Make necessary adjustment if door doesn’t close smoothly.

4) Apply Seals:

- Install necessary seals provided on door and side panel if any.

C. Final Checks

5) Level & Secure:

- Confirm door is level; tighten all screws.
- Let silicone cure for 24 hours before use.


4. Care & Maintenance

- **Cleaning:** Use only **pH-neutral soapy water** (pH 6.8–7.2).
- **Avoid:** Abrasives, solvents, or acidic cleaners.

  Ensure seals are flush to prevent leaks.


ORIENTATION

Flip the door inside out to achieve LH and RH reversal.

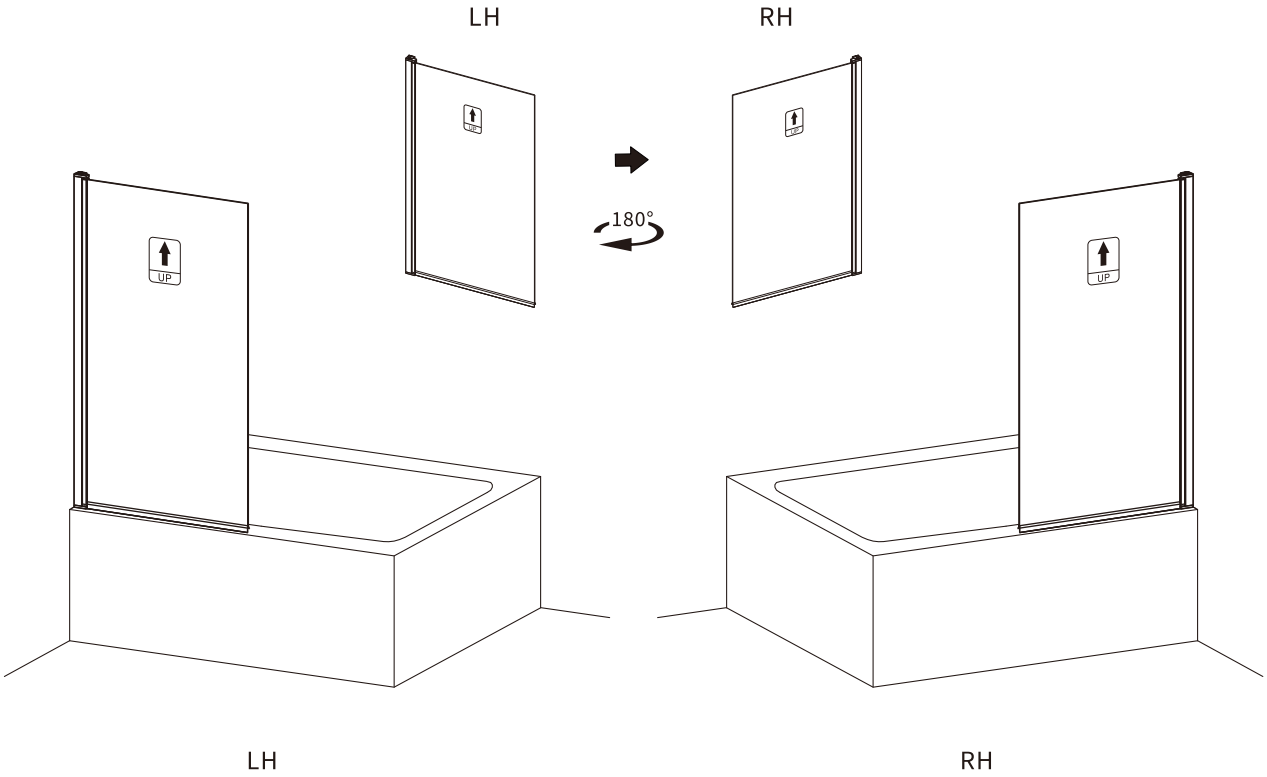


This product is reversible for left or right hand opening.
Please follow the diagram, and detail below for your choice of installation.

Tools Required (not supplied):


Spirit Level		Torque Screw Driver	
Pencil		Snips	
Drill		6mm Drill Bit	
Silicone		Measuring Tape	
Knife			


COMPONENTS

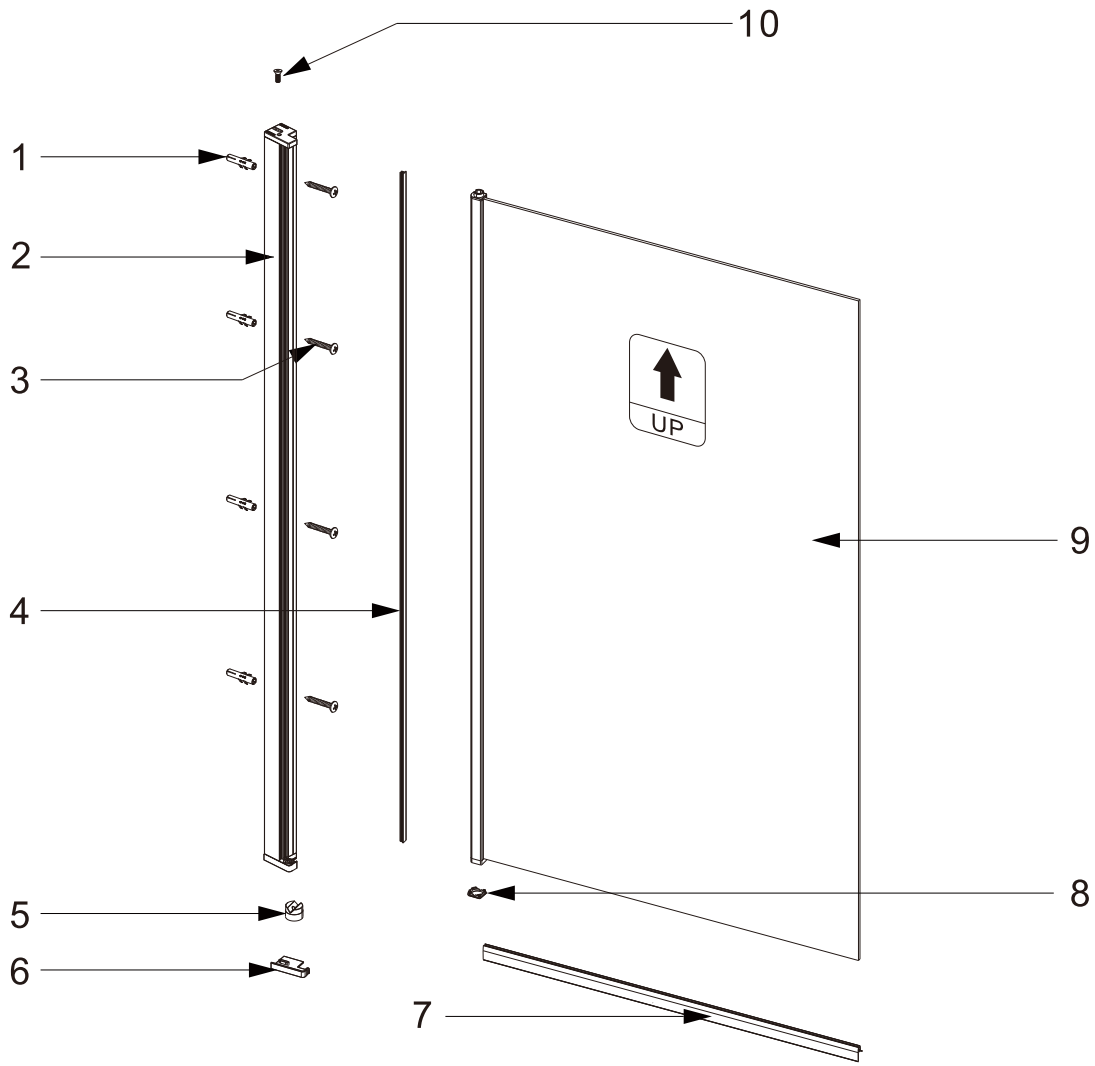

1 Wall Plug x4	2 Wall Profile x1	3 Screw ST4*50 x4
4 Wall Profile Cover Strip x1	5 Pivot core x1	6 Bottom water proof block LH x1 RH x1
7 Bottom water proof strip x1	8 Pivot core gasket x1	9 Moving Panel x1
10 Screw M4*16 x1	11 Allen Key 2.5MM 3MM	


INSTALLATION

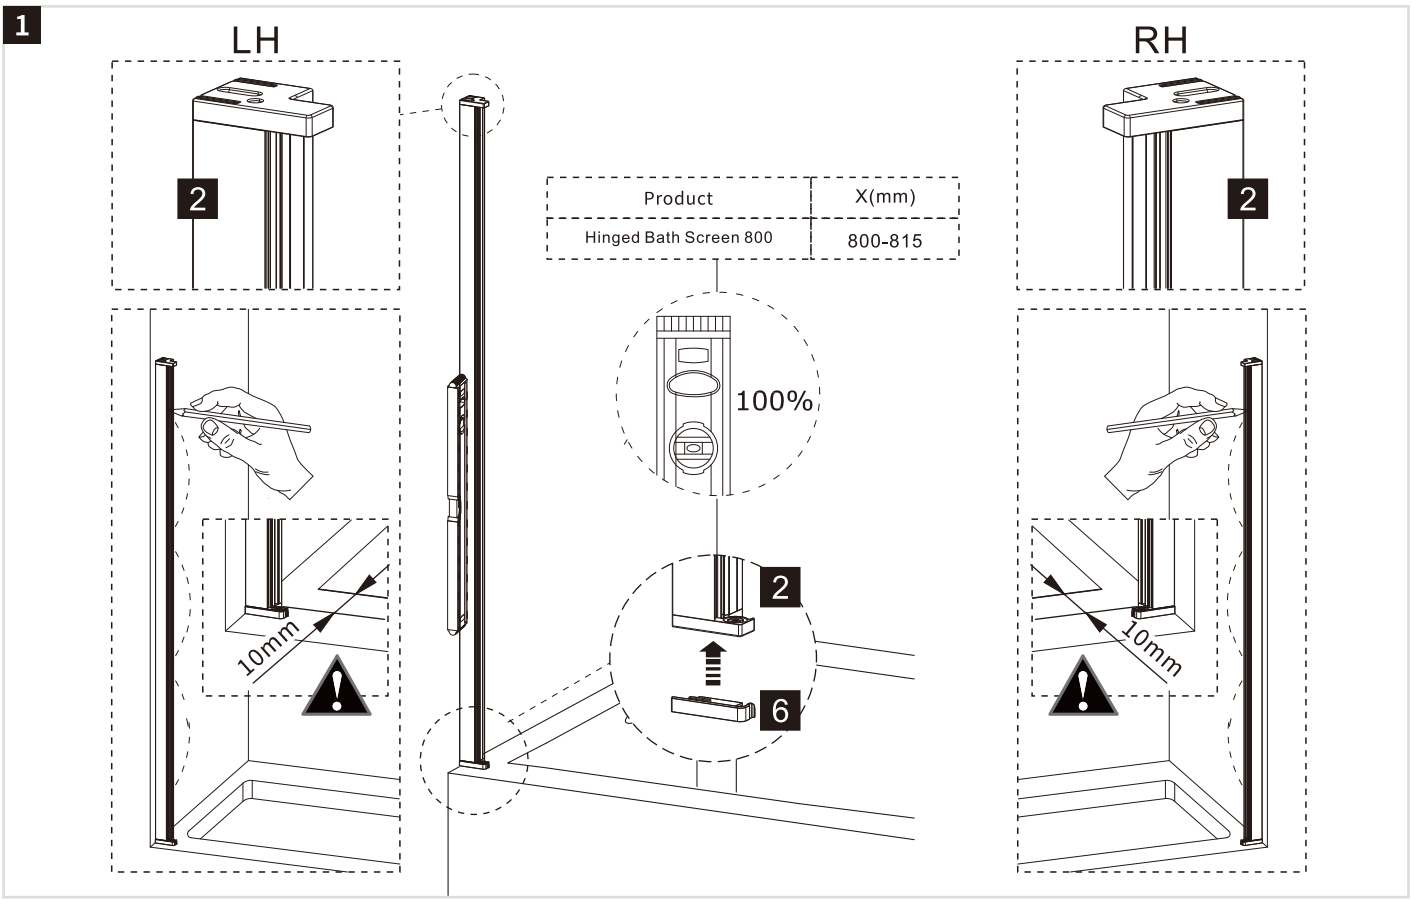

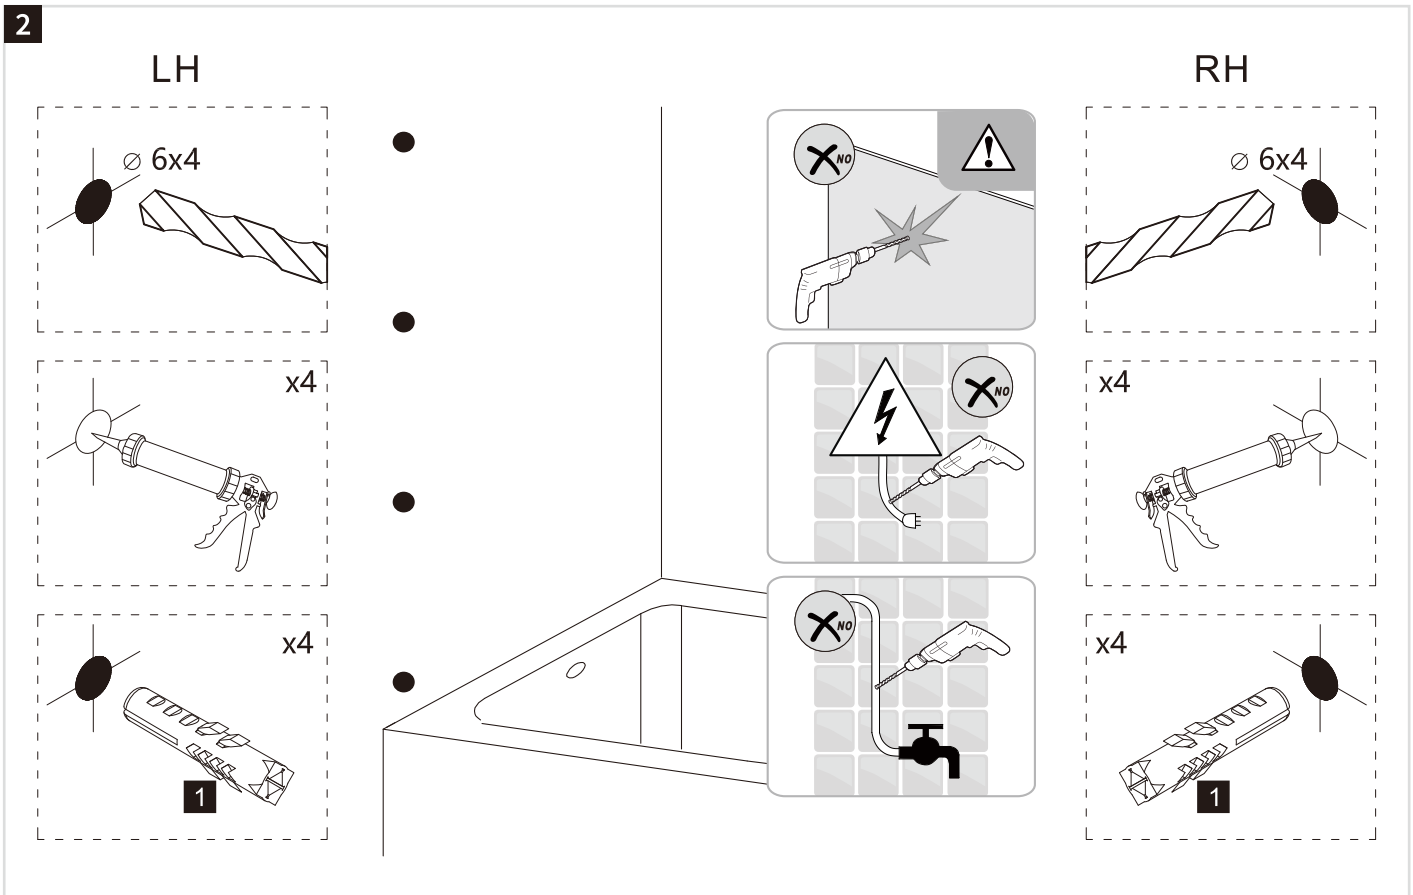


INSTALLATION

3

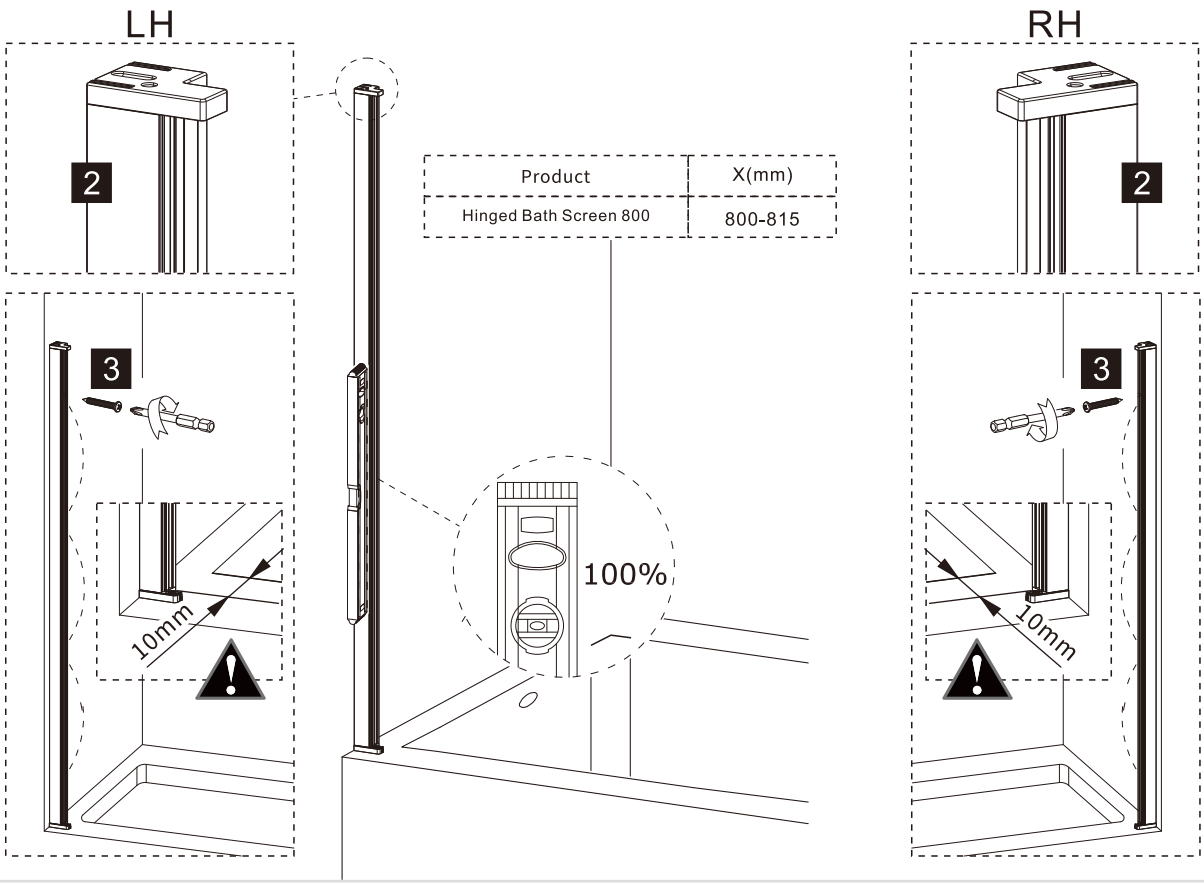


4

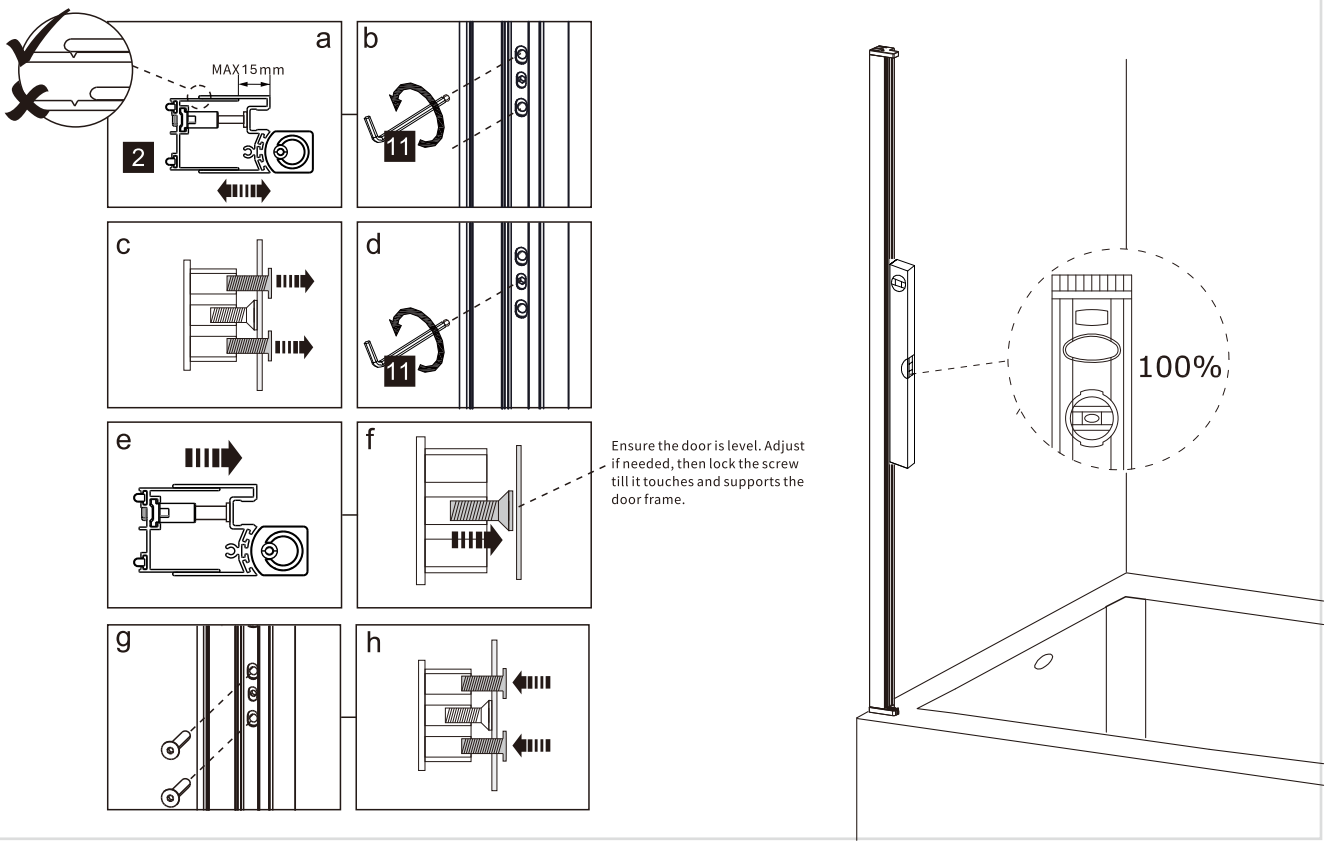


INSTALLATION

5

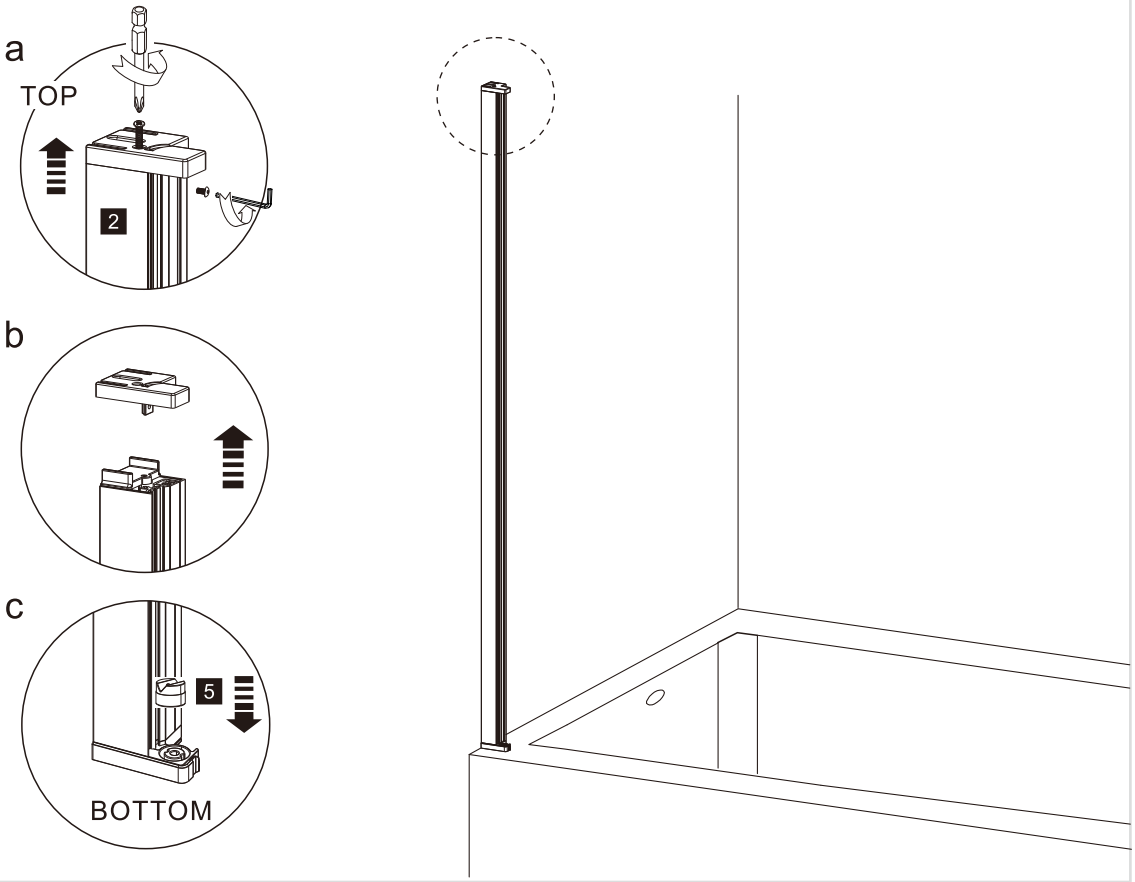


6

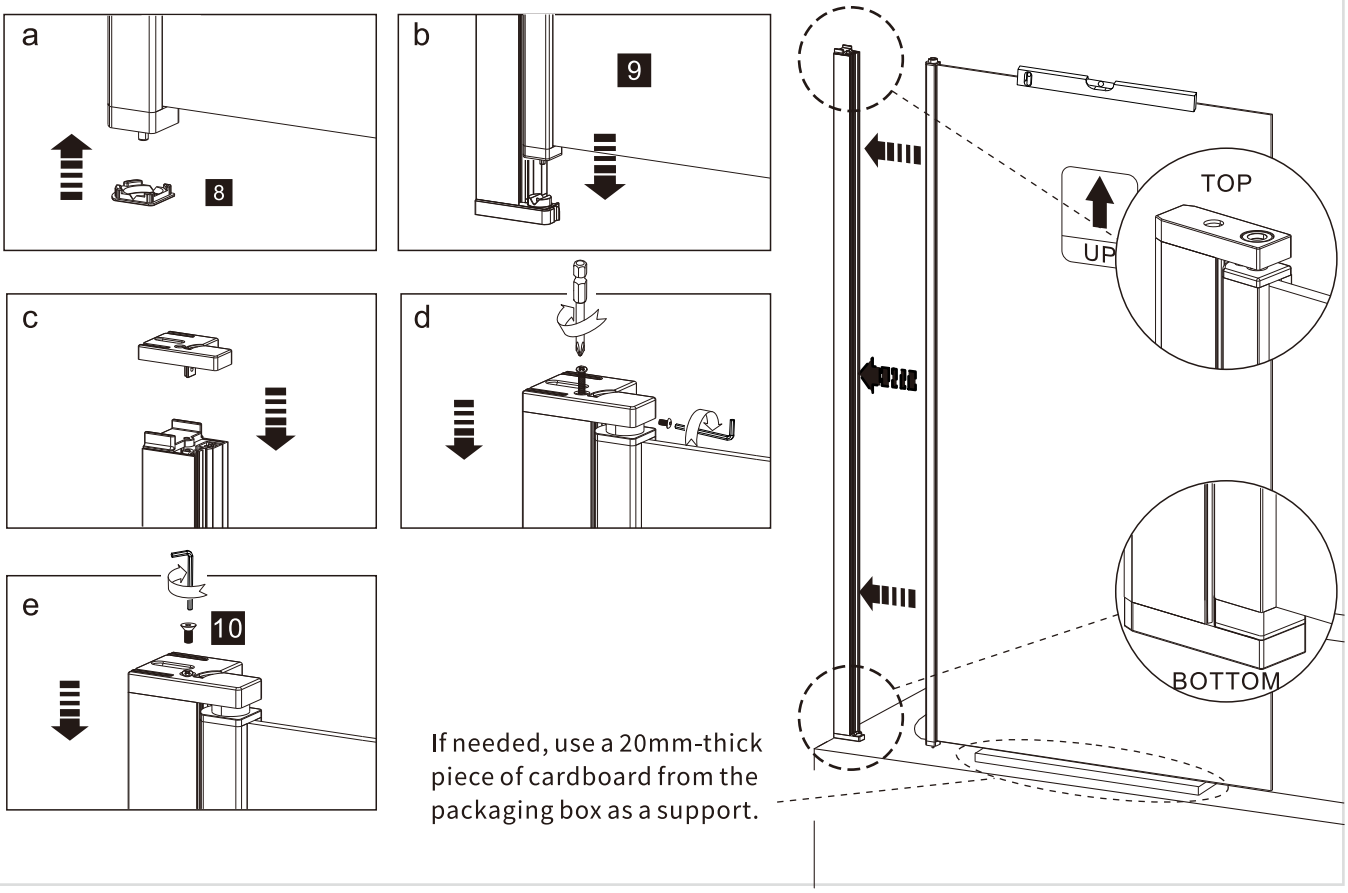


If needed, use a 20mm-thick piece of cardboard from the packaging box as a support.

INSTALLATION

7

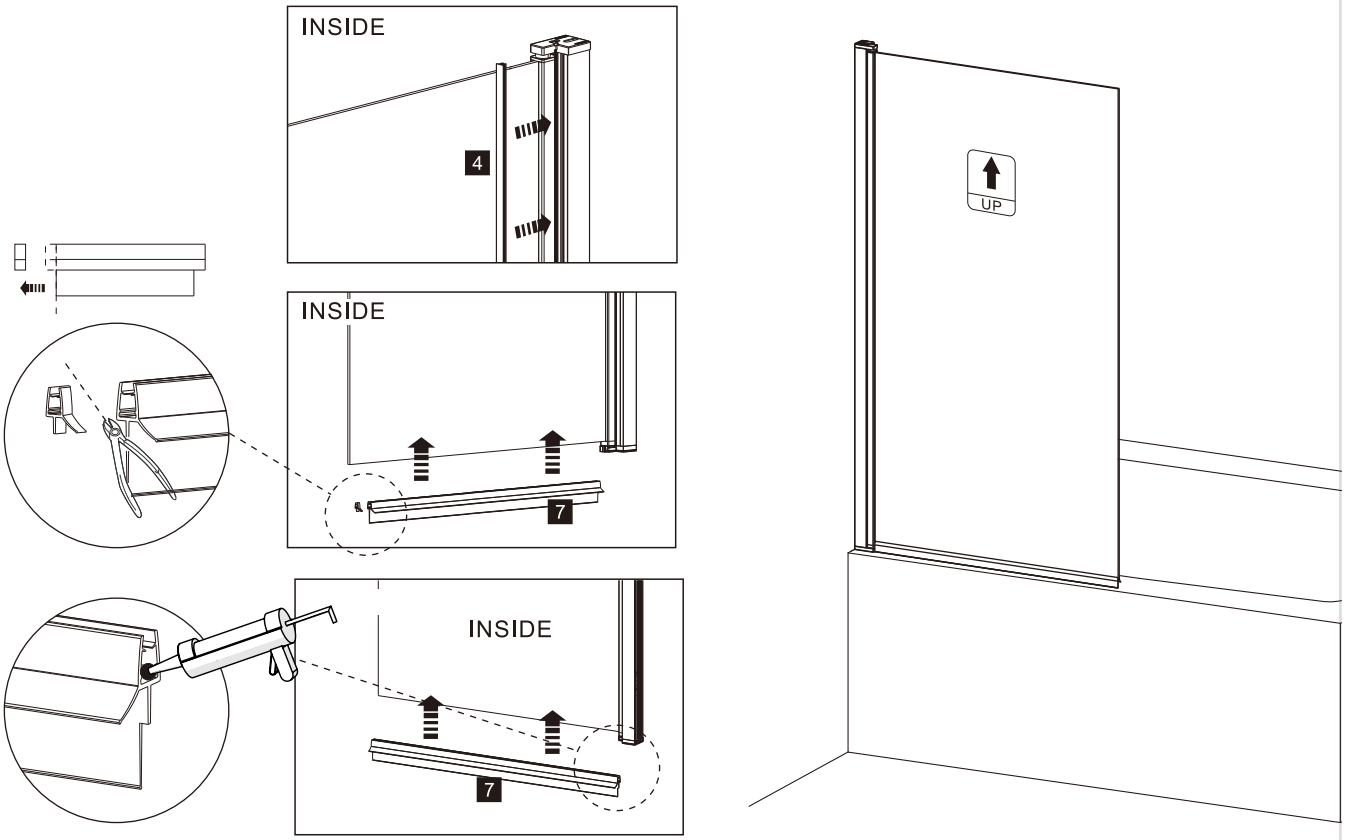

8

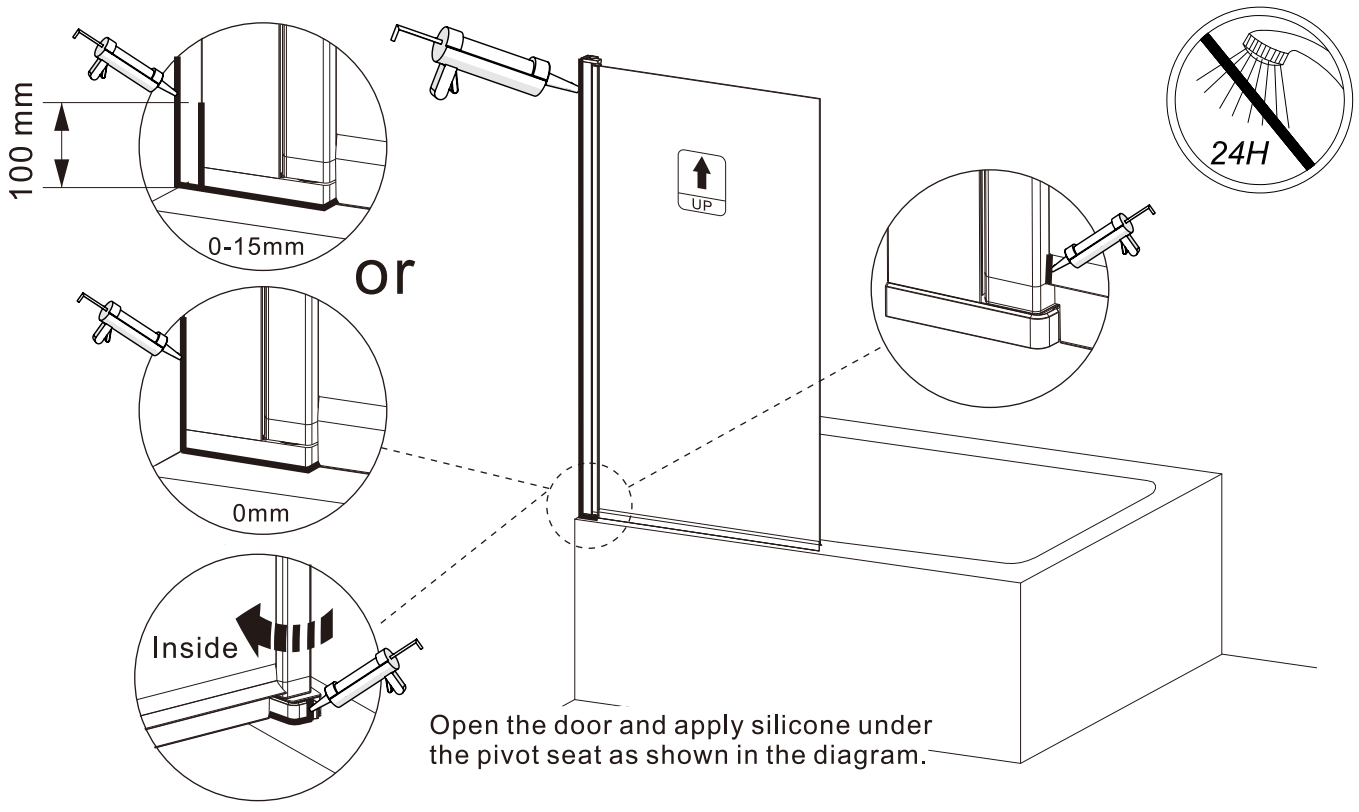

Part of the
Bathroom Brands Group

We reserve the right to make technical modifications without prior notice.

BATHROOMBRANDS®

Lake View House
Rennie Drive, Dartford
Kent DA1 5FU
United Kingdom
0345 873 8840
www.bathroombrands.com