



**BATH/  
CO/**

**Shower  
Installation  
Instructions**

## **VCBC Shower Tray Installation Instructions**

### **Tools & Materials Required:**


1. *Spirit Level*
2. *Mastic Gun*
3. *Sharp Knife*
4. *Adhesive – Sika Showerbond & Holdfast Fixall approved*
5. *Levelling Compound (if required)*

***Please ensure that you read the attached installation instructions that are specific to the tray that you have ordered. VCBC has moulded upstands and factory fitted upstands on our shower trays and the installation of the wall linings and positioning of the tray against the wall are critical to ensuring that they are installed in accordance with our installation instructions.***



1. Remove tray from packaging and check for freight damage or product faults. Any VCBC shower tray installed with existing damage becomes the responsibility of the installer.
2. Check the installation area for a level floor and correct waste position. Place tray on the area concerned and check levels again. It is the Installers responsibility to make sure that the tray is level on all four sides. Failure to do so will compromise the installation of the liner and the shower enclosure. Use floor levelling compound as and when required or in the case of a wooden floor plane the area flat and level as an uneven surface will cause stress upon the acrylic skin and this can lead to delamination.
3. Check the position of the tray on the level surface – shower trays over 1000mm that are fitted with our factory fitted upstands need to be installed in accordance with our requirements to pack the bottom wall plate up to 6mm to accommodate this. If a tiling strip is being used the tray is installed after the wall lining.
4. Once the waste position has been set up you will need to backfill any hole with concrete and depending upon the size of the hole allow this to dry overnight before you attempt to glue the tray to the floor. If the floor is damp the glue will not adhere to the surface properly and this is easily recognised if any warranty is actioned in the future.
5. Remove the protective film from around the outside edge and centre and apply the adhesive onto the back of the tray ensuring good even coverage to gain maximum adhesion over a large surface area. Thin lines or small blobs will not create the adhesion to the floor that is required.
6. Turn the tray over, place into final position and tighten up the easiclean waste.
7. Use the packaging to cut a protective cover for the shower tray and then place a bag of mortamix or similar on the tray to ensure an even spread of weight whilst the adhesive cures.
8. Leave overnight as a minimum before installing the shower doors and wall linings
9. In the case of tiles walls we recommend sealing the area between the top of the upstand and the bottom of the wall liner with a sealing strip before the waterproofing occurs

# Shower tray installation instructions

## Installation of an acrylic shower tray with tiling strip

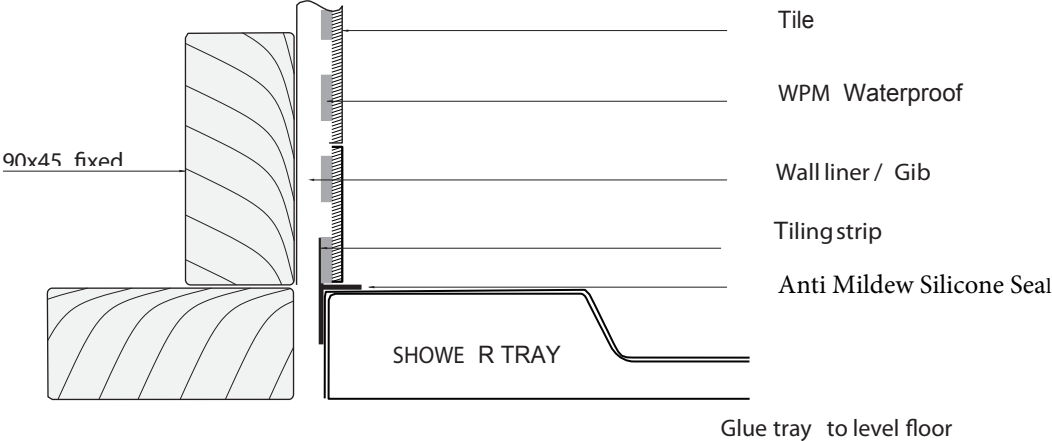


## VCBC shower installation with a factory fitted upstand for an acrylic liner or a tiled wall

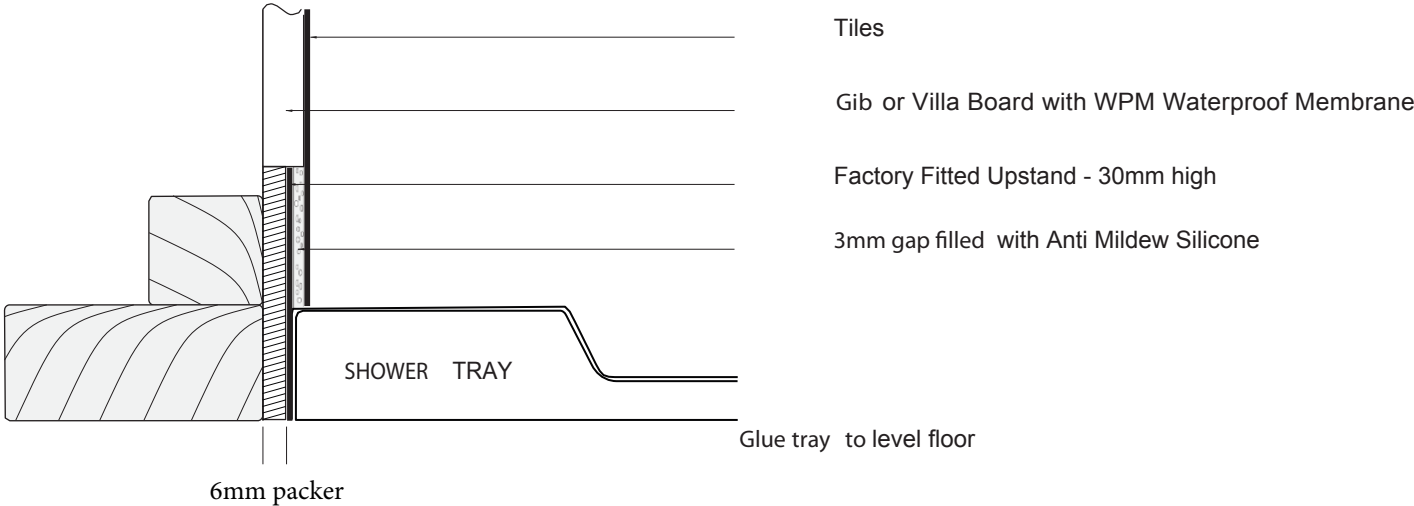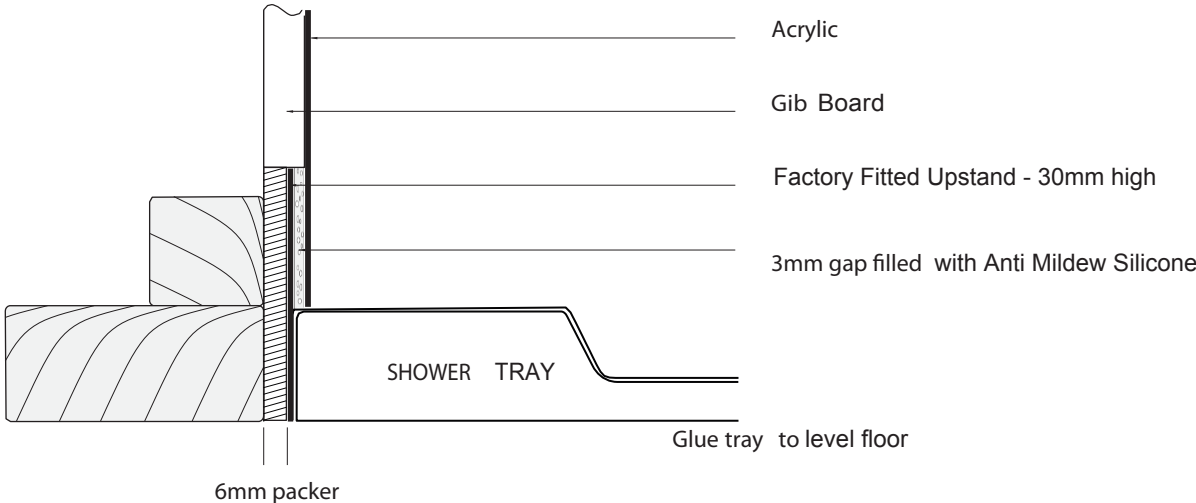

# Moulded upstand shower tray installation instructions

## Installation of an acrylic shower tray with tiles

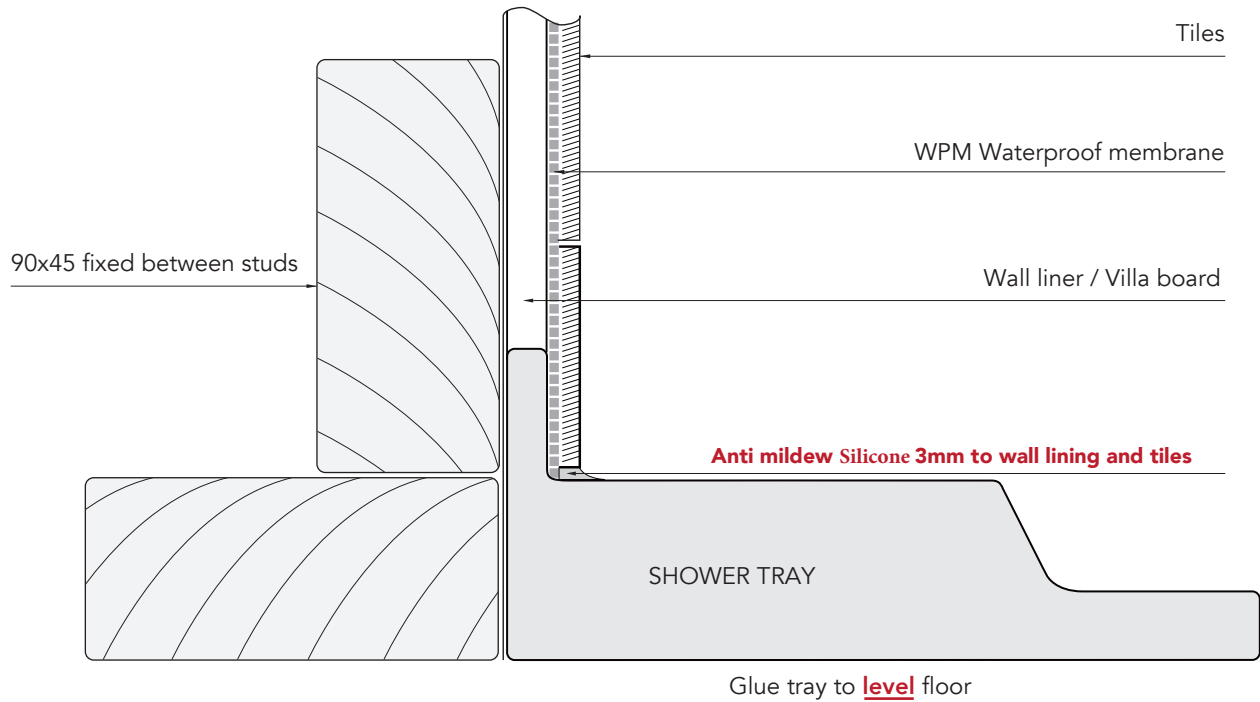

## VCBC shower installation with acrylic liner

